

 
AUTEL TS508WF QuickStart Guide



BASIC FUNCTIONS

EASY & FAST


- Activate All Known TPMS Sensors
- Read Sensor ID, Temperature, Pressure
- Read Sensor Battery Condition
- On-Tool OE Sensor Information
- Program MX-Sensor With 3 Programming Options
- Batch Program 1-16 MX-Sensors

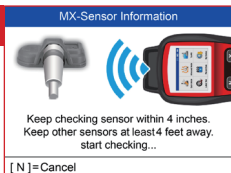

COMPLETE FUNCTIONS

POWERFUL

 - Same TPMS Features as Quick Mode
- TPMS Status Screen - View System Faults
- Read & Clear TPMS DTCs
- On-Tool DTCs Description
- Program MX-Sensors by Copying ECU Sensor IDs
- On-Tool Relearn Procedure Guide
- Widest Vehicle Coverage For OBD Relearn
- Tire Pressure Placard Value Reset

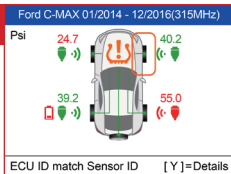


AUTEL TS508WF Registration & Update

Remember to check monthly for latest software updates.


Please Note: Updates are performed via a computer with Internet access.

You could update your device by USB with the Maxi PC Suite or by Wi-Fi.

 
For USB update with the Maxi PC Suite, please refer to the following instructions:

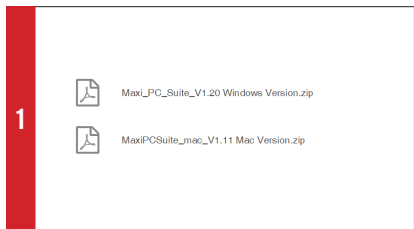

 
- Visit www.maxitpms.com > Products > TS508WF. Click on "Maxi PC Suite" to download the application;

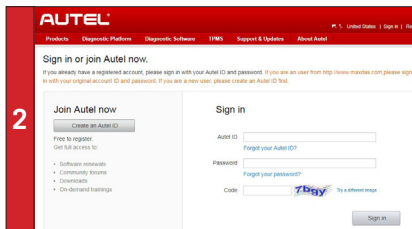

 
- Register an Autel ID and bind your device to the ID by visiting <https://pro.auteltech.com>.
- Input your email address as your Autel ID, create a password.

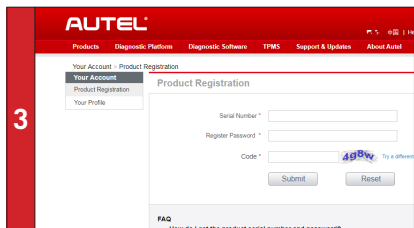

 - After sign in with your Autel ID, select your product model, input the Serial Number and Register Password of your device to bind it to your Autel ID.

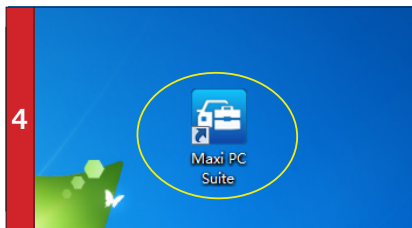


 - Unzip and Install Maxi PC Suite. Once installed, the Maxi PC Suite shortcut displays on the desktop. Double-click on the Maxi PC Suite icon and the application will launch.

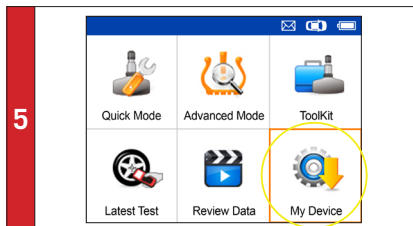


5

 - Use the USB cable to connect the TS508WF to the computer. Select My Device on the tool. Press Y button.

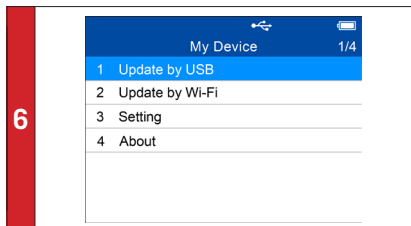


6

 - Select **Update by USB**.
- Press Y button to place the tool in Update Mode.

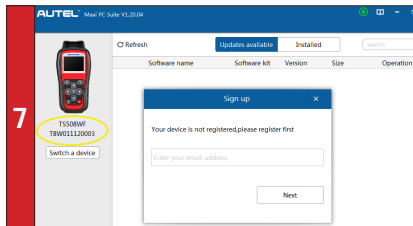


7

 - The application will scan the tool serial number. A message will display if the tool is not registered. Fill in your email address as the Autel Account to register the tool. If the tool is already registered, go to Step 11.

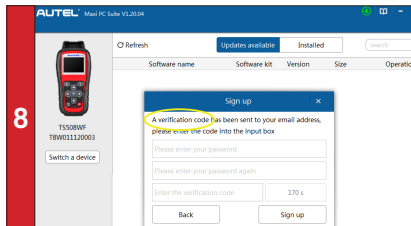


8

 - A verification code will be sent to your email address. (If your email address has been signed up before, just fill in your Autel ID password.)

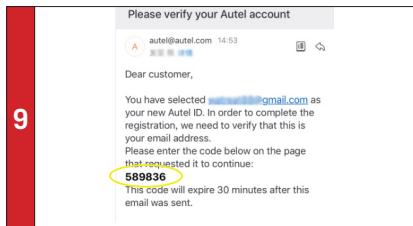


9

 - Come to your email box. Find the verification code from your email.

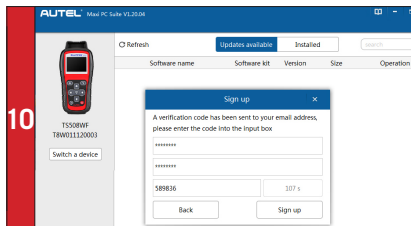


10

 - Enter the verification code. Create and input a Password in the space provided, click on **Sign Up**. Your tool has now been registered with your email address as Your Autel Account.

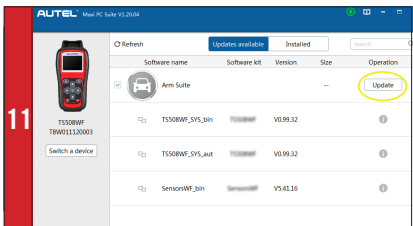


11

 - The application will display a list of available updates. Click on **Update** to initiate download.

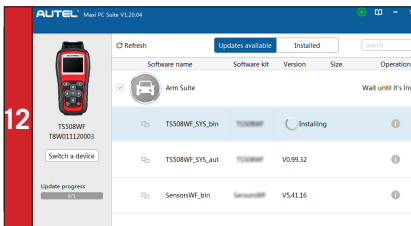


12

 - Wait for the updates to complete. The update process can be monitored on the display.

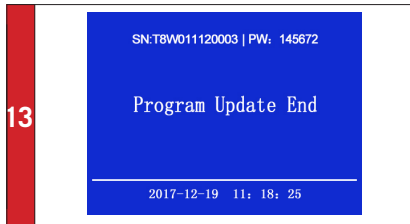

13

 
- Downloaded programs are installed automatically and will replace older version.
- The device will display "Update End" once installation is complete.

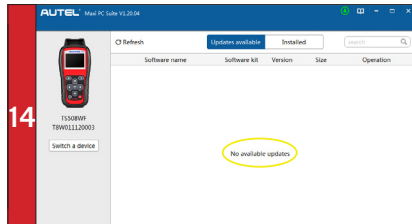

14


- When the application displays "No available updates" you may disconnect USB cable from PC and Tool. Your tool is ready to use.

 For Wi-Fi update, please refer to the following instructions:

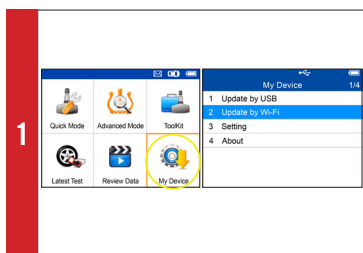


1

 - Open the device, select **My Device** on the main screen, press **Y** button.
- Select **Update by Wi-Fi**.

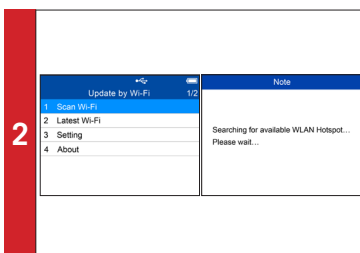

2

 - Select **Scan Wi-Fi** and connect to Wi-Fi.
- You can connect to the same Wi-Fi hotspot directly for the future use by selecting **Latest Wi-Fi**.

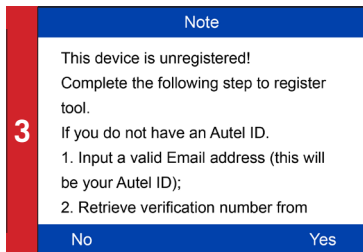


3

This device is unregistered!
Complete the following step to register tool.
If you do not have an Autel ID.
1. Input a valid Email address (this will be your Autel ID);
2. Retrieve verification number from

No


Yes

 - The device will automatically detect whether it's bound to an Autel ID after successfully connected to Wi-Fi.

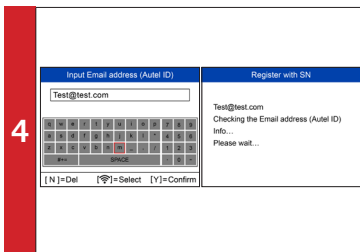


4

 
- If you haven't an Autel ID and the device has not been bound, input your email address as your Autel ID.

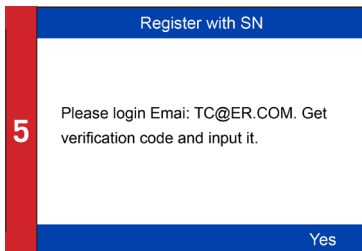

 
- Go to your email box to get the verification code.
- Input the verification code and your Autel ID password to finish registration.

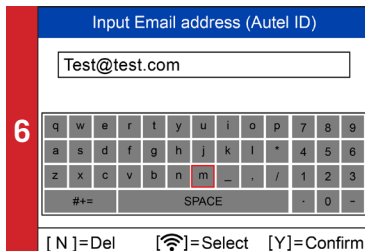

 
- Input your email address and password to bind the device to your Autel ID if you already have one

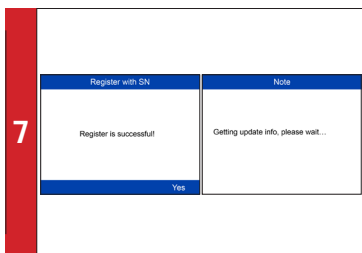

 
- After successfully bound, press Yes to continue. Update information will be scanned automatically.

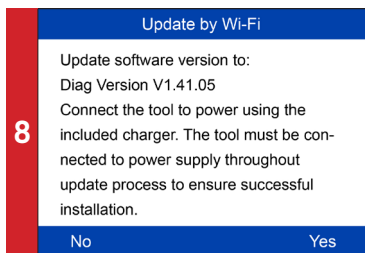

 
- If the device software needs to be updated, proceed as information on the screen, connect the device to USB cable, press Y button, updating starts automatically.
- The device will reboot once update completes.
- There will be notification if the device software is already the newest version.

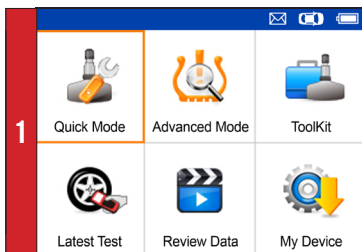


- On Main Menu select **Quick Mode**

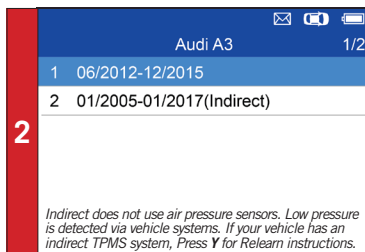 

 
- Select vehicle **Make, Model, and Year**

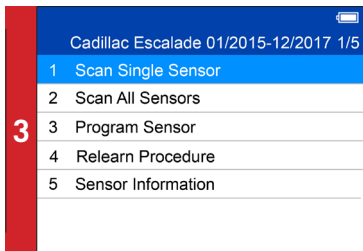

 
- Select **Scan Single Sensor**.
- Place tool close to the sensor.

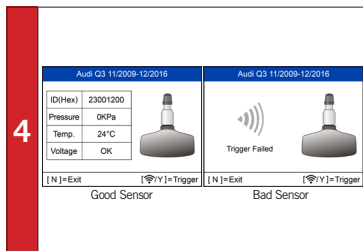

 
- If sensor is good (shown left) ID and pressure will display.
- If sensor is bad (shown right) on tool, press **N** to return to Main Menu, and continue to Step 6

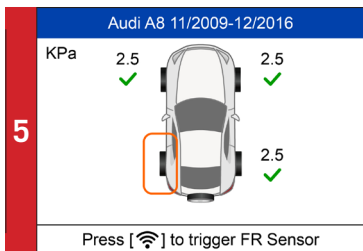


- Select **Scan All Sensors**.

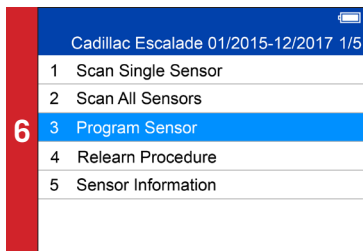 

 
- Select **Program Sensor**: program AUTEL MX-Sensor.

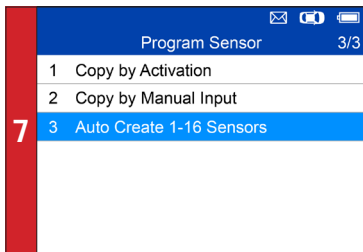

 
- Three ways to program MX-Sensors: Copy by Activation, Copy by Manual Input, Auto Create 1-16 Sensors.
- (Refer to **Sensor Programming Quick Guide**)

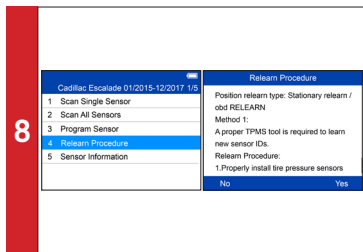

 
- Select **Relearn Procedure** on-tool relearn procedure guide.

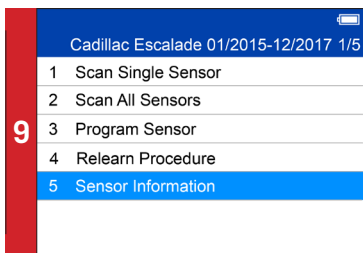


- Select **Sensor Information**.

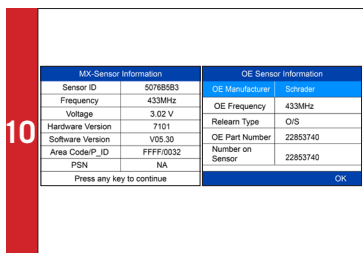 

 
- Sensor Information for both MX-Sensor information & OE sensor information displays.

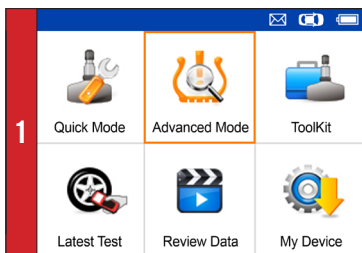

 
- On main menu, select **Advanced Mode**

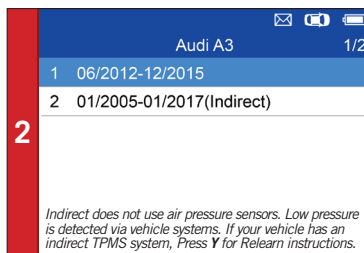

 
- Select vehicle **Make, Model, and Year**

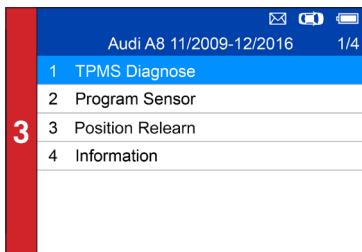

 
- Select **TPMS Diagnose**: complete TPMS system health check

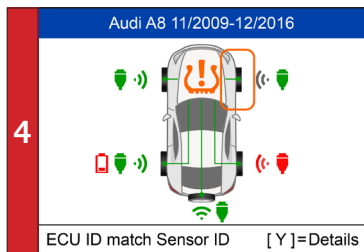

 
- Read sensor ID from ECU, check sensor ID matching condition, read DTCs from TPMS ECU and clear DTCs
- (Refer to **TPMS Diagnose Quick Guide**)

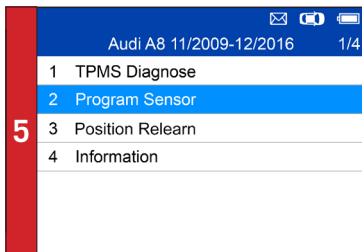

 
- Select **Program Sensor**: program AUTEL MX-Sensor

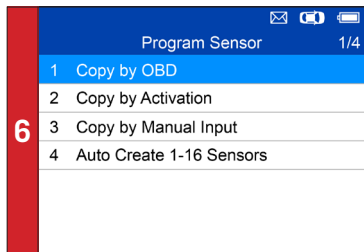

 
- Four ways to program MX-Sensors: Copy by Activation, Copy by OBD, Copy by Manual Input, Auto Create 1-16 Sensors.
- (Refer to **Sensor Programming Quick Guide**)

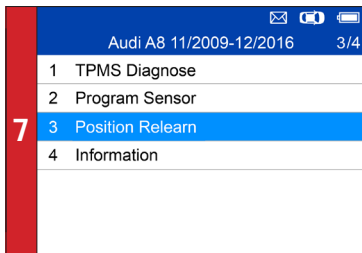

 
- Select **Position Relearn**: on-tool relearn procedure guide & wide OBD relearn coverage

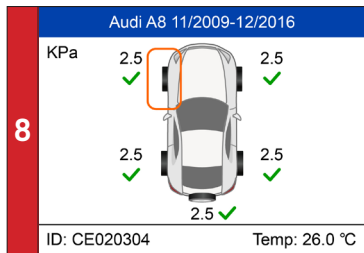

 
- Three ways for Position Relearn: Stationary Relearn, Automatic Relearn, OBD Relearn.
- (Refer to **Position Relearn Quick Guide**)

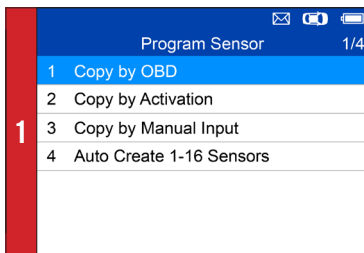


- Select **Copy by OBD**

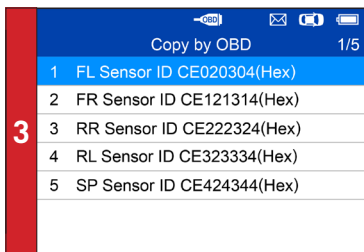 

 
- Place one MX-Sensor near the top of the tool
- Select tire location and ID to be copied and press **Y** to program the new MX-Sensor

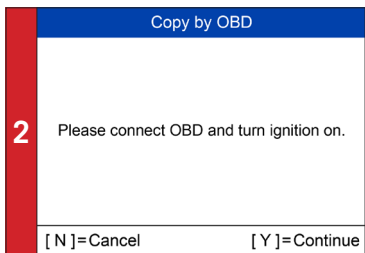

 - Connect tool to vehicle via OBD II cable, turn ignition on
- Press **Y** to continue

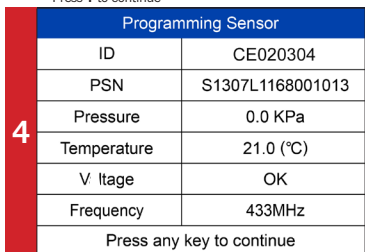

 
- Sensor programmed.
- MX-Sensor ID is copied from the sensor ID stored in ECU.

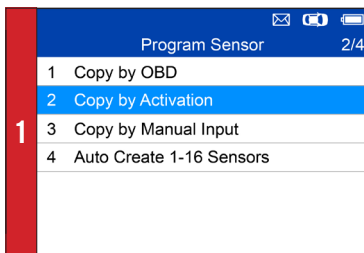


- Select **Copy by Activation**
- Place the tool near the sensor to be copied



 
- Place a new MX-Sensor near the top of the device to program

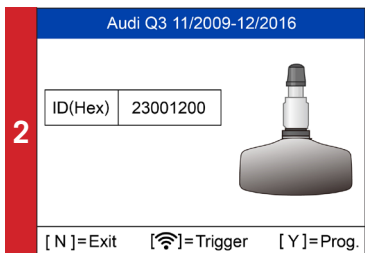

 
- Trigger successful.
- Press **Y** to program the original sensor ID to MX-Sensor

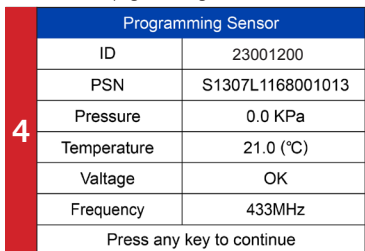

 
- Sensor programmed.
- MX-sensor ID is copied from the activated sensor ID.

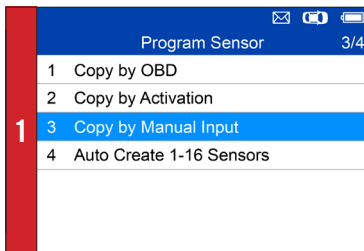


- Select **Copy by Manual Input**

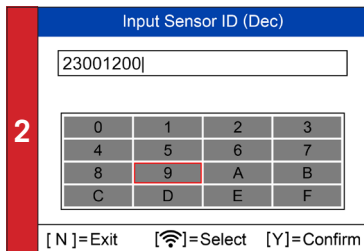 

 
- Enter the original sensor ID in the field

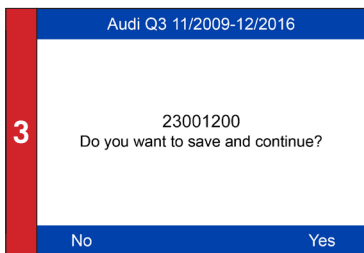

 
- Place a new MX-Sensor near the top of the device
- Press Y to save and program

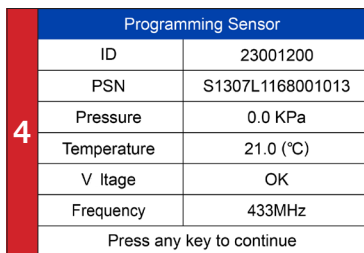

 
- Sensor programmed.
- The original sensor ID is copied to the new MX-Sensor.

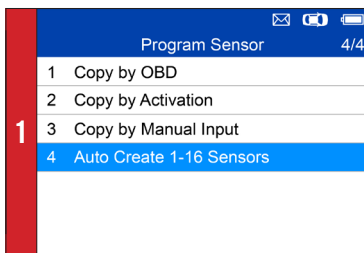

 
- Select **Auto Create 1-16 Sensors**
- Place 1-16 MX-Sensor(s) close to the top of the tool

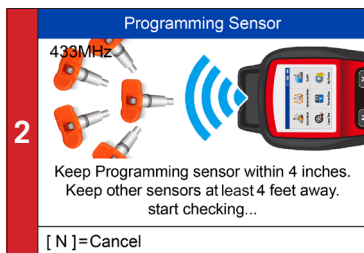

 
- The tool will automatically detect the sensors near the tool.

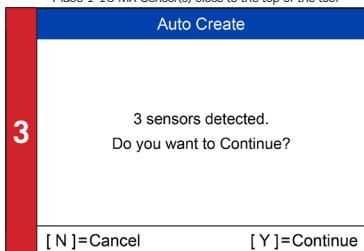


- Press Y to program

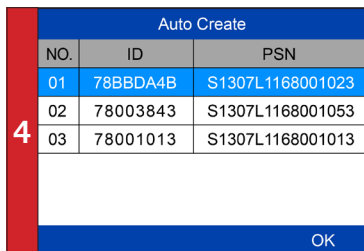 


- Sensor programmed.

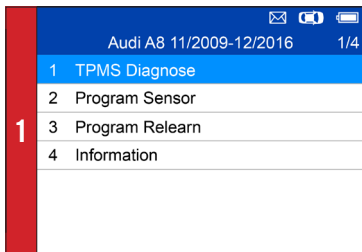 


 
- Select **Advanced Mode**
- Select vehicle **Make, Model, and Year**
- Select **TPMS Diagnose**

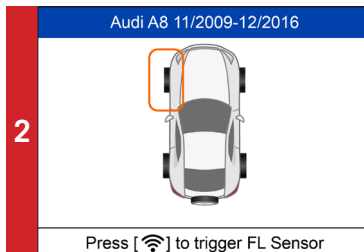

 
- Hold the tool close to the tire sidewall right above the sensor.
- Press **Trigger** to activate the sensor
- **Sensor ID, temperature and pressure will display.**

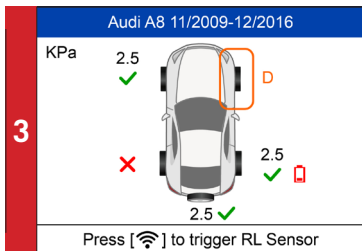

  
- Different sensor activation results will display.

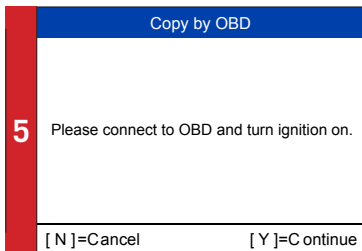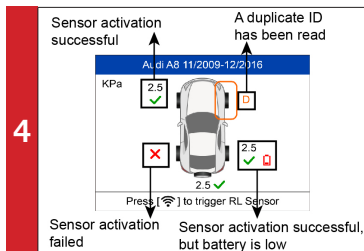

 
- When all the sensors (4 or 5 wheels) have been triggered, OBD connection option will display (when available).
- Connect OBD cable to the vehicle and press **Y** to continue
- The tool will automatically read sensor IDs and DTCs from ECU.

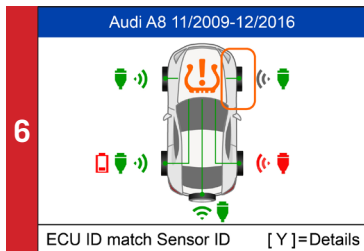

 - **Green signal and OBD icons:** the ECU ID matches Sensor ID.
- **Red signal and OBD icons:** the ECU ID does not match Sensor ID.
- **Red battery icon:** low sensor battery / **Amber TPMS icon:** DTCs present in the ECU.

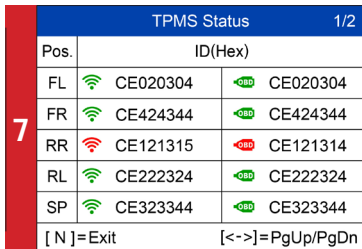

 - Press **Y** to view details
- TPMS Status details will display, including: activated sensor IDs, ECU sensor IDs, pressure, temperature, **sensor battery**

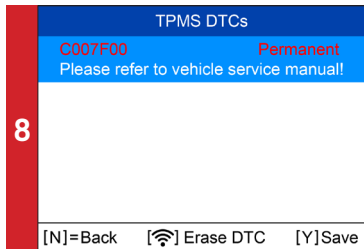

- **Amber TPMS icon:** DTCs present in the ECU.
- Select TPMS icon and press **Y** to view DTCs
- Press **Trigger** to erase DTC

Relearn Procedure


Relearn Procedure:

1. Turn ignition to ACC position.
2. Press and hold unlock and lock buttons on the keyless entry transmitter until horn sounds and LF tire signal is illuminated. Or using the DIC, press and release INFO


OK

- Select **Position Relearn**
- Read the Relearn Procedure and press Y to continue

Buick Park Avenue 01/1997-12/2005

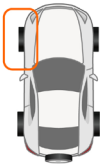

2

Press [] to trigger FL Sensor

- Activate all sensors mounted on the vehicle
- Follow the Relearn Procedure to perform Relearn

Buick Park Avenue 01/1997-12/2005 3/4

- 1 TPMS Diagnose
- 2 Program Sensor
- 3 **Position Relearn**
- 4 Information

OK

- Select **Position Relearn**

Relearn Procedure

Relearn Procedure:

Reset the system after each adjustment of the tire inflation pressure and after every tire or wheel change. Parking the car for more than 20 minutes.

On the Control Display and on the vehicle:

OK

- Follow the Relearn Procedure to perform Relearn

Relearn Procedure

Installation:

1. Properly install tire pressure sensors.
2. Ensure all tires are inflated to the pressure listed on the tire placard. (located in the door jam of your vehicle)

Automatic Relearn Procedure:


1. Let vehicle sit for 20 minutes. Drive

OK

- Read the Relearn Procedure carefully

Audi A8 11/2009-12/2016

KPa

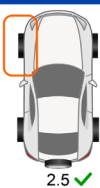

2.5 ✓ 2.5 ✓
2.5 ✓ 2.5 ✓
2.5 ✓

ID: CE020304 Temp: 26.0 °C

2

- Activate all sensors mounted on the vehicle

OBD Relearn

3

Please connect OBD and turn ignition on.

[N] = Cancel [Y] = Continue

- Connect the tool to vehicle via OBDII cable and turn ignition on
- Press Y to continue

OBD Relearn

4

OBD Relearn Successful.

- OBD Relearn will process automatically.
- OBD Relearn Successful.